







## Onderdelenlijst 525L

REP. NUM.	CODE	BESCHRIJVING
1	010933	UPPER HOUSING ASSY -P230L
2	010934 COVER	ASSY
3	328270	SIDE HANDLE ASSY
4	010936 RUBBER	ASSY
5	010937 FIRING	PIN ASSY
6	328440	TOOL SEAR LEVER ASSY
7	328160 RELEASE	ASSY
8	328170 TRIGGER	ASSY
9	010938 CONTROL	ROD ASSY
10	328430 RELEASE	SPRING ASSY
11	010939	FEED CONNECTION ASSY
12	010940	DISC ROTATION LEVER ASSY
13	010941	INTERMEDIATE AXLE ASSY
14	328280 STRAP	ASSY
15	010942 SUP	PLE TUBE ASSY
16	311580 CATCH	ASSY
17	010944 BARREL	ASSY
18	010945 RECEIVER	ASSY
19	010947 BARRELS	RING ASSY
20	010948	TELESCOPIC RING ASSY
21	328300 PISTON	ASSY
22	328810	COMPLETE PIN GUIDE ASSY
23	328820	PIN GUIDE ASSY
24	328370 SHUTTLE	AXLE ASSY
25	328140 CONTROL	ROD ASSY
26	328380 SHUTTLE	ASSY
27	328330	EQUALIZING SHUTTLE ASSY
28	328360	SMALL CONTROL ROD ASSY
29	328340	CONTROL PIN AXLE ASSY
30	328070	AXLE OF SMALL CONTROL ROD ASSY
31	328350	PISTON RETAINING SLUGS BAG ASSY
32	328830 CONTROL	PIN ASSY
33	010950 HEAD	ASSY
34	010931	HEAD CONNECTION ASSY
35	328020	LOCK AXLES ASSY
36	328010 ENERGY	ABSORBER ASSY
37	328050	OVERDRIVE RING ASSY
18b	010946	INTERMEDIATE RING ASSY