



Gray positions in italics are not available
 Repère grisé = pièce non disponible



Pièces de rechange // spare parts list
TRIX250

Rep.	Code	Designation	Description
1	624746	Kit cabestan	Hand wheel kit Trix (incl. 2-6)
2	624747	Axe de cabestan	Hand wheel Trix
3	623302	Levier de cabestan	Lever
4	623303	Boule bakelite	Button GN 7911
9	624706	Chariot complet	Kit trolley
10	623391	Chariot	Trolley
11	623308	Axe galet concentrique	Concentric roller
12	623309	Axe galet excentrique	Eccentric roller
13	623392	Galet	Roller
14	623311	Plaque support	Metal support plate dovetail
18	623423	Roulement axe chariot	Needle bearing 6002 2RS
19	624707	Axe chariot	Axle trolley
20	624751	Axe moteur	Axle
21	620837	Ciclip	Safety ring 15/1
22	623424	Helicoil chariot	Helicoil M12 x 18
23	623520	Niveau poignée	Vertical spirit level
24	623224	Niveau horizontal	Horizontal spirit level
25	623422	Roulement de galet	Needle bearing 6001 2RS
26	624752	Manette de serrage	Brake lever
28	623321	Ecrou	Hex screw M8
32	623395	kit attache rapide	Quick faster set
35	623397	clavette attache rapide	Catch
45	624713	Vis axe colonne	column screw
46	624714	Ecrou	Hex screw
53	623413	Coulisseau	Plate with screw thread spindle M10
56	624765	Axe coulisseau	Fixing support axle
60	623384	vis d'index	Cylinder screw M10 x 20
62	623350	Rondelle	Washer Ø10.5
69	623321	Ecrou M8	Hex screw M8
73	624722	Semelle	Base plate
75	623358	vis de niveau	Setscrew base plate M10 x 60 ZN
79	624723	Index de positionnement	Center pin

3-3-2009

